

ANT ESPORTS
GP100
 WIRED GAMEPAD

Warranty

Ant Esports GP100 Wired Gamepad comes with 1 year International warranty.

Warranty Card

Customer Name : _____
 Product Name : _____ Model No.: _____
 Address: _____ Date of Purchase: _____
 Dealer Name : _____ Phone No.: _____

CONNECT WITH US ON

ANT ESPORTS

www.antesports.com
 support@antesports.com

*Notice: Any alteration of the clauses and contents and copies are invalid.

*All product names, logos, and brands are property of their respective owners. All company, product and service names used here are for identification purposes only. Use of these names, logos, and brands does not imply endorsement.

ANT ESPORTS
GP100
 WIRED GAMEPAD

User Manual & Warranty Card



※Product Introduction

The gamepad applies to Android devices (device should have OTG function), PC, and Play station3 console.


※Product Specifications

Working Platforms	Android / PC / PS3	Working Temp.	-20℃ ~ 65℃
		Working Humidity	20 ~ 80%
Working Modes	Android standard / Xinput / Dinput / PS3	Connection Types	Wired
Gift Box Size		Working Current	<30mA (no vibration)
Product Size	160 X 104 X 59 mm	Net Weight	189G

※Attention

1. Avoid strong vibration, do not disassemble, refit or repair on your own.
2. Do not keep in humid, high temperature or soot place.
3. Avoid water or other liquid in gamepad, it may affect the performance of gamepad.
4. Keep away from fire, the built-in battery has danger of explosion.
5. Charging voltage is USB 3.7-5.5V DC supply (normal Android smart phone charging power can be used)
6. Children should be under adult's supervision to use this product.
7. Please contact the distributor or our after-sale service staff if you have any quality problem or suggestions.

※Product Overview

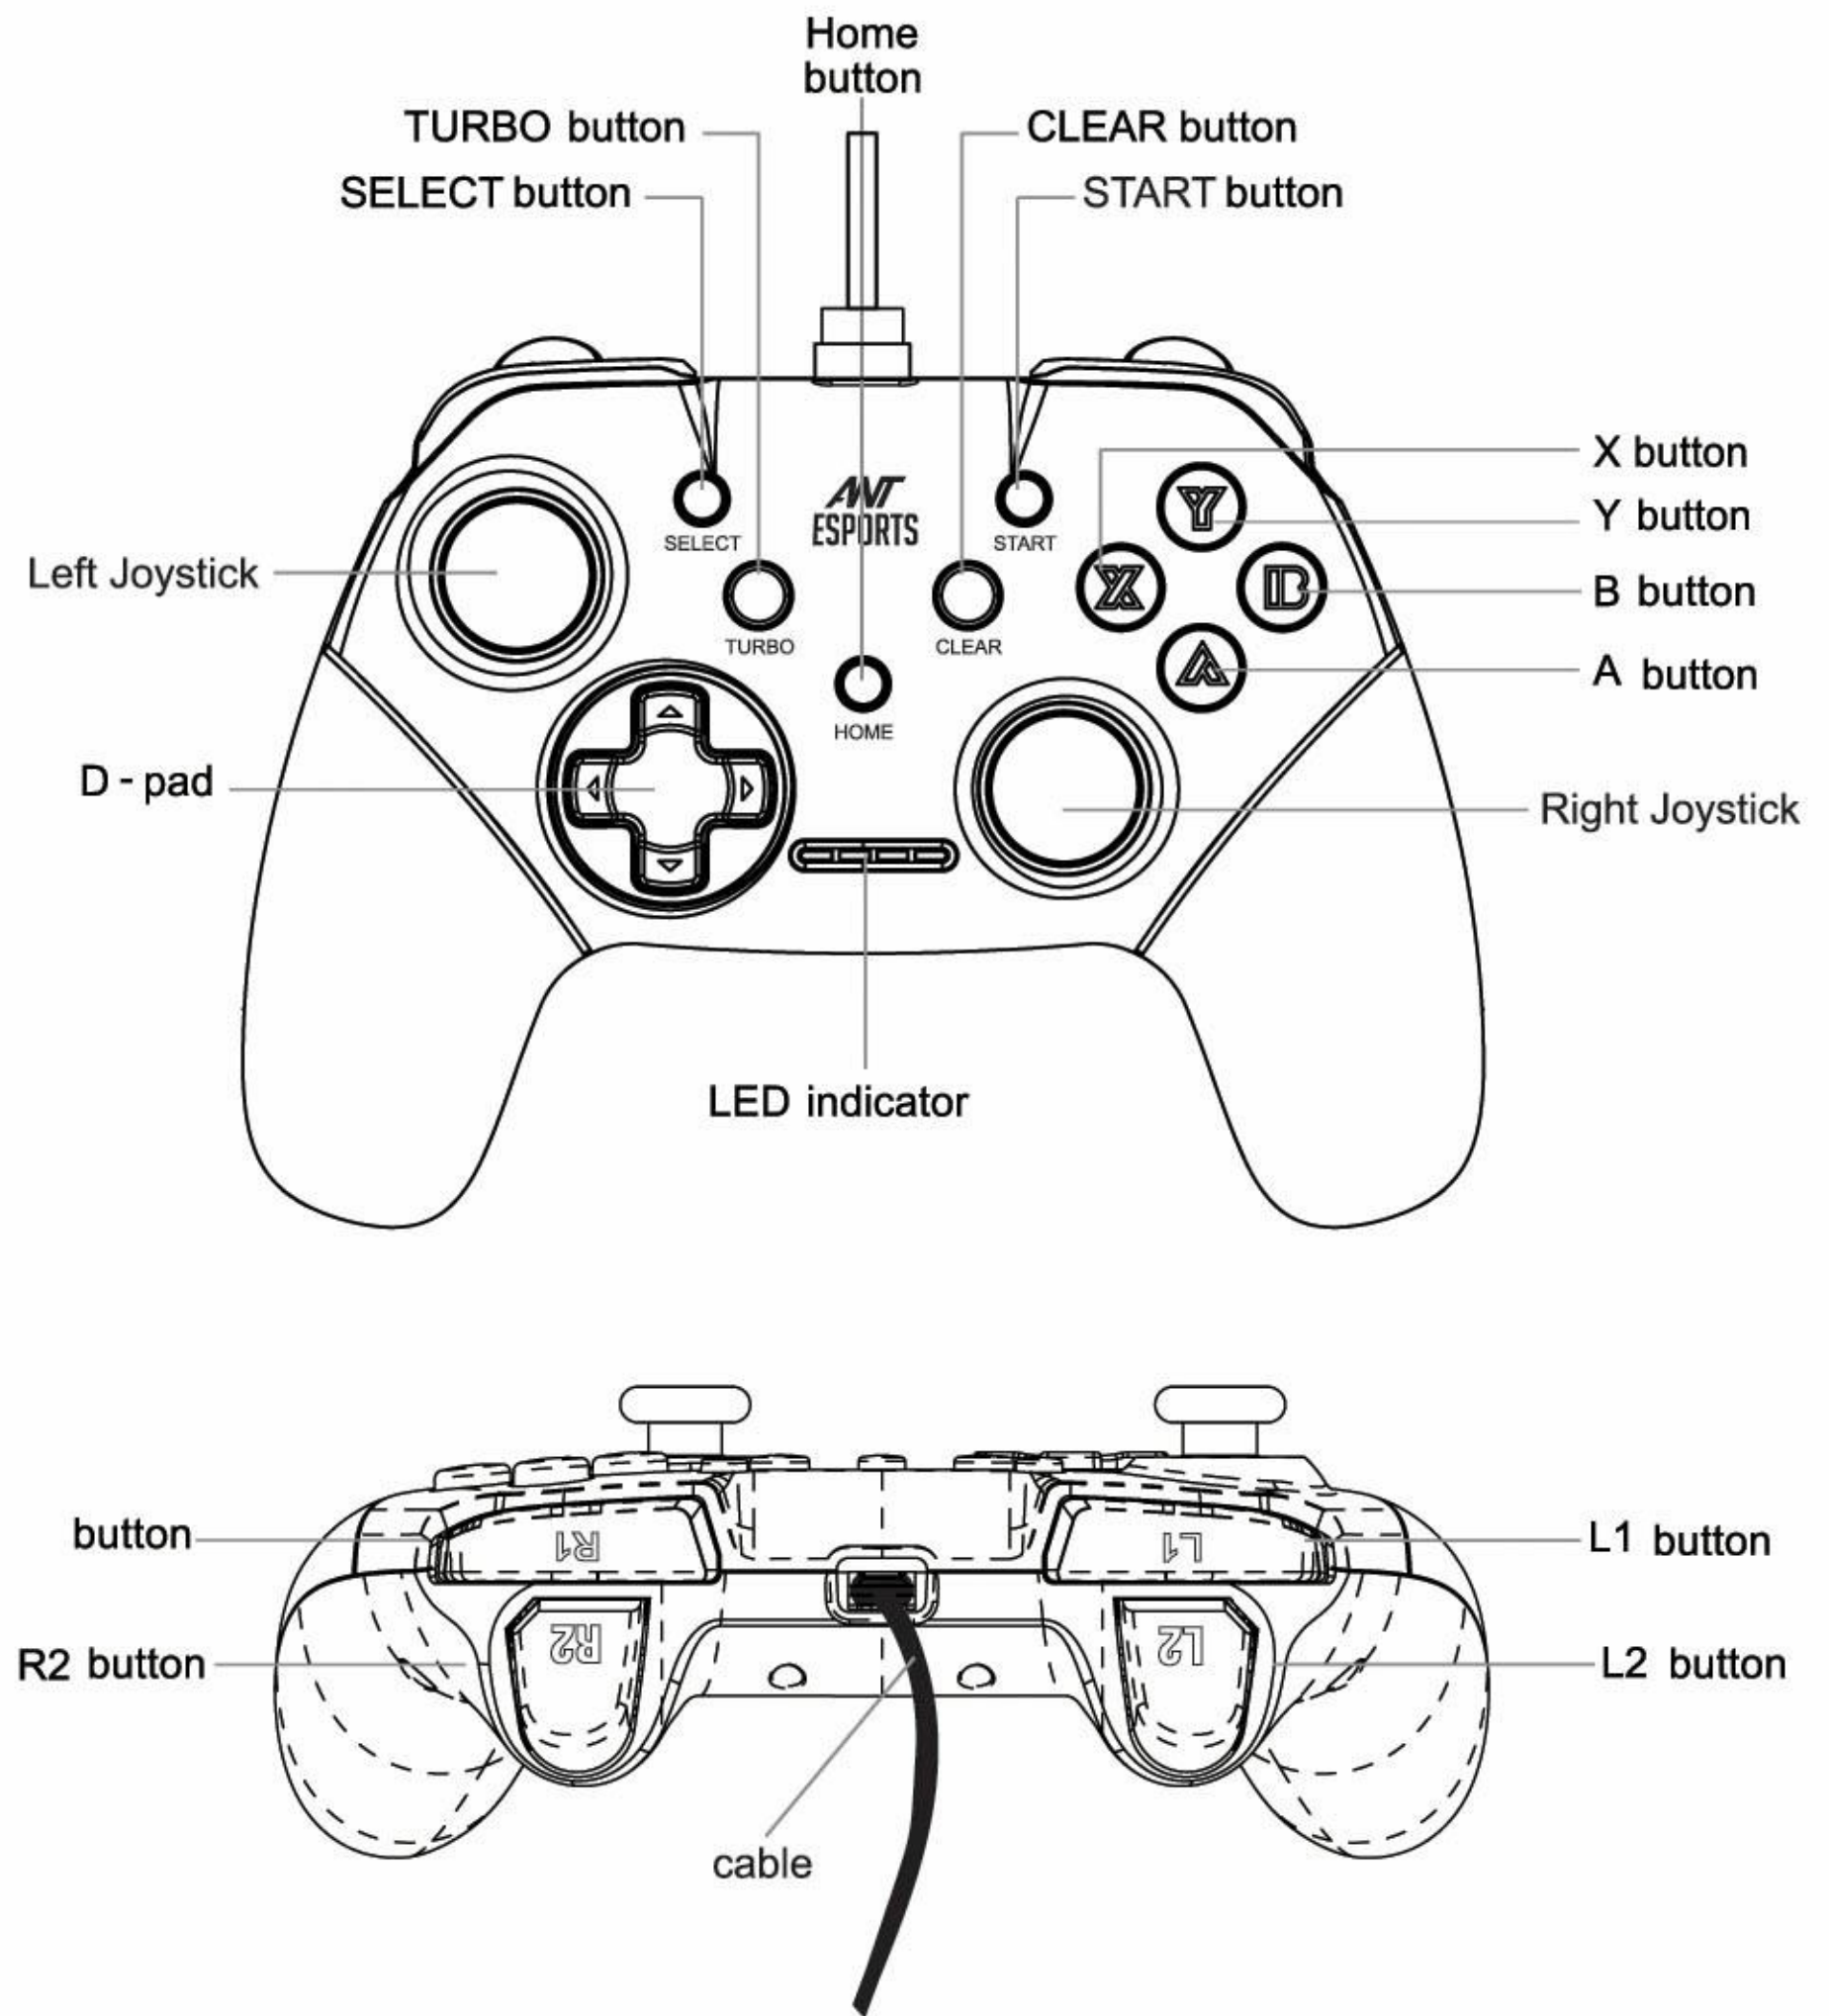

Download Support Driver:
<http://antesports.com/downloads>

※Gamepad Connection

Android Platform (Android smart phone / tablet / smart TV / TV box)

Connection Method

- a. Connect gamepad with Android device by USB cable (Android smart phone and tablet should support OTG function and need OTG convertor).
- b. When the LED2/LED3 light keeps on, the gamepad connects successfully.

PlayStation3 Platform

Connection Method

- a. Connect gamepad with PS3 console by USB cable.
- b. When the 1st LED light keeps on, the gamepad connects successfully.

PC Platform

Connection Method

- a. Connect the gamepad with computer by USB cable.
- b. When the LED2 light keeps on, the gamepad connects successfully.

Mode Exchange (Dinput – Xinput)

Press Home button to transfer for D-input and X-input mode.

D-input Mode: PC games that support game controller. LED1 keep lighting.

X-input mode: X-360 games for PC, LED2 keep lighting.

※TURBO Function Introduction

TURBO is semi-automatic, it can create one or more continuous button press.

Setting Method

Press one or more buttons (excluding D-pad, joysticks, SELECT, or START buttons), and then press " TURBO " button to set TURBO function.

Clear TURBO

Press one or more buttons, and then press the " CLEAR " button to clear the TURBO.

Function

TURBO is used more in shooting games. Your fingers would easily get tired if you continuously press the same button (shooting button). With the TURBO, you can continuous shoot by holding the shooting button.

※Possible Problems

Why the gamepad can not be identified on computer?

1. Make sure your computer USB port is working.
2. USB voltage is not stable because of short power supply of computer.
3. Try another USB port.
4. Need to install X360 gamepad software for systems below WinXP (including XP).

Download Support Driver - <http://antesports.com/downloads>

Why the gamepad does not work in games?

1. The game does not support gamepad.
2. Set the gamepad mode in the game before using.

Why the gamepad does not vibrate?

1. The game does not support vibration
2. Vibration function is not open in game setting.